

SINGLE BUTANE BURNER

INSTRUCTION MANUAL



INSTRUCTIONS:

1) Ignition

- Turn the On/Off knob towards the "On" position until there is a click, and check that the stove is lit. If it is not lit, immediately return the knob to the "Off" position and repeat the ignition process.
- When the ignition fails several times, there may be a popping sound accompanied by a small burst of flame when the burner does finally ignite. Do not place your face or hand near the burner when igniting. Upon first use, the flame near the electrode will become red. This is normal and will dissipate after several uses.

2) Adjusting the heating power

- Turning the knob towards the "On" position strengthens the heating power, while turning towards the "Off" position weakens it.

SINGLE BUTANE BURNER

INSTRUCTION MANUAL

(cont.)

INSTRUCTIONS:

When using low heat, make sure to check the flame as it will become difficult to see the flame.

3) Turning off

- Please turn the ON/OFF knob to the "OFF" position.

4) Confirm flame goes out

- After use, check that the flame is completely out. Allow unit to cool before removing canister. Just after use, the body and canister become extremely hot. Always remove canister after each use. Failure to do so may result in gas leakage and/or fire.
- CAUTION: When replacing fuel cylinder, be sure no sources of ignition are present.

5) Removing the canister

- Open the fuel canister cover, hold the canister, apply slight pressure in the reverse direction of when the canister was fitted, and slide the canister horizontally away from the magnet.
- Make sure we reattach the cap before storing a removed canister.
- Close fuel canister cover and store canister with cap on until next use.