

CLASSIC SINGLE BURNER

INSTRUCTION MANUAL



INSTRUCTIONS:

1. Make sure the LP cylinder valve is in the full OFF position. Check this by rotating the valve in the close direction until it stops.
2. Make sure the HVR brass valve is in the full OFF position. Check this by rotating the valve in the CLOSE direction until it stops. NOTE: If the brass valve is left in the ON position, the Gas Flow Limiting Device will activate
3. Turn on the fuel supply by S-L-O-W-L-Y rotating the LP cylinder valve one full turn in the OPEN direction. NOTE: To prevent activating the Gas Flow Limiting Device , always open the LP cylinder slowly.
4. Position a fireplace match or long lighter over the burner, then S-L-O-W-L-Y turn the HVR brass valve OPEN until you hear gas HISSING from the burner. The burner should light immediately.

CLASSIC SINGLE BURNER

INSTRUCTION MANUAL

(cont.)

INSTRUCTIONS:

5. If the flame fails to light within 3-5 seconds, turn OFF the gas flow by rotating the HVR brass valve in the CLOSE direction until it stops. Allow gas to evacuate/dissipate before repeating steps 3 & 4.