

# TORCH FIRE HEATER

## INSTRUCTION MANUAL

---



### INSTRUCTIONS:

1. Turn the CONTROL KNOB to the OFF position.
2. Fully open the LP cylinder valve.
3. Press and turn the CONTROL KNOB to HI position (counterclockwise).  
Press down the control knob and hold for 3-5 seconds.
4. While holding the CONTROL KNOB, push the RED igniter button several times until the pilot flame ignites. Keep the CONTROL KNOB fully pushed in for an additional 30 sec. after the burner ignites, then release knob.

NOTE: If the pilot flame does not light, or if it goes out, repeat steps 3-4 above.

5. Adjust the temperature using the CONTROL KNOB

# TORCH FIRE HEATER

## INSTRUCTION MANUAL

---

(cont.)

### INSTRUCTIONS:

6. To turn OFF, push down the CONTROL KNOB and turn clockwise to the OFF position.
7. Turn the gas valve completely OFF.

