

DOUBLE DOOR REFRIGERATOR

INSTRUCTION MANUAL



INSTRUCTIONS:

1. To change lock setting press and release the INFO button. T1 will appear.
2. Press DOWN button until "LOC" appears.
3. While pressing and holding the INFO button, press the UP or DOWN button to change the lock settings. If "NO" appears, the controller is unlocked. If "YES" appears, the controller is locked.
4. Once the lock setting has been set correctly, release the INFO button. Wait 5 seconds for the display to show TEMPERATURE.

DOUBLE DOOR REFRIGERATOR

INSTRUCTION MANUAL

(cont.)

